


Front Door INTERCOM:

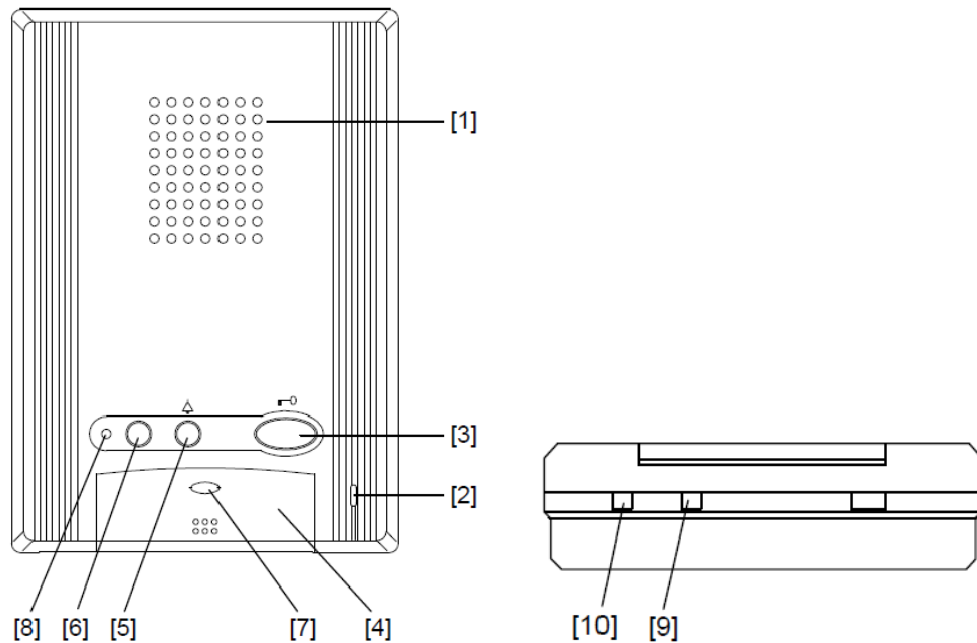

1. Speaker
2. Microphone
3. Door release button
4. Talk button

Underneath: -

9. Receive volume control (slide to right for max.)
10. Call ringtone volume control (slide to Right for max.)

The intercom system allows visitors, at Waves front door, to call the unit by pressing the unit number followed by the green bell symbol.

In the unit, the intercom will emit a distinctive ringing tone.

To answer the call, press and release button [4] and speak into microphone [2].

To allow entry through the Waves front door and then to your floor level via the lift, press and hold Door Release Button [3]. You should hear the Waves front door lock click indicating that the door latch has been released.

Advise your visitor to PULL the door open, not try to turn the handle as most do.

Your visitor should then be able to pull open the Waves front door, enter and proceed to the lift and once inside, press the button for your floor level.